

Coding Instruction:

1. Press the Key button till the pilot lamp is on. (CH1 press 1 time, CH2 Press 2 times, CH3 Press 3 times)

2. Press the key button in a row(3-5 times) until the pilot light flashes 3-5 times, it means you have finished the coding for the channel you have chosen.

(NO.1 pilot lamp for CH1 channel, NO.2 pilot lamp for CH2 channel, NO.3 pilot lamp for CH3 channel)

PS: If you do not operate within 8 seconds after pressing the key button, the receiver does not receive the

Code delete instruction:

Press the Key button(about 8 seconds) till all pilot lamps start flash, then release the Key button. When the flash light stop to flash and be dark, It means all the coding have beendeleted.