
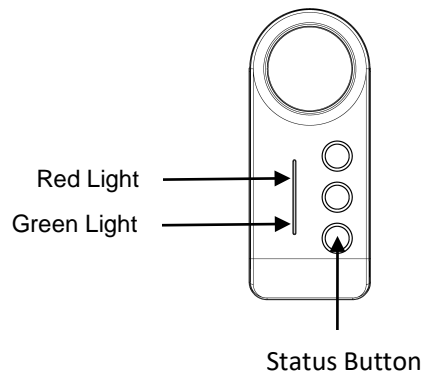


# Instruction of RC05

## Parameters:

- Work voltage: DC 3.3V
- Battery: CR2032\*2
- Work current: Max. 25mA
- Work frequency: 433.92MHz

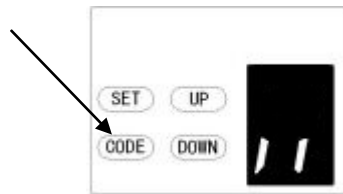

## Coding instruction:

- Press the code button of opener, a dot(.) will appear in the corner.
- Press any button on transmitter except status button, the dot(.) on the display turn off.
- Press the same button on transmitter again, the dot(.) on the display will flash, now you have finished the coding.

## Status button for check the garage door's position.

Status button for check: Press the status button and then press the button which you coded before.

Red light flash means the door is opening

Red light lasts for 5 seconds means the door is opened

Green light flash means the door is closing

Green light lasts for 5 seconds means the door is closed

Red light and the Green light flash alternately, it means the door was not opened/closed well.

## Operating instruction:

