

DURŲ MONTAVIMO VADOVAS, NAUDOJIMAS IR PRIEŽIŪRA REI 60, REI 120, EI₂ 60, EI₂ 90, EI₂ 120 IR MULTIPURPOSE PROGET DURYS

REI homologacija:	BZ050REI060P013F2	BZ050REI120P007F1
	BZ050REI060P014F2	BZ050REI120P008F2
BZ050REI060P004F1	BZ050REI060P016F2	BZ050REI120P010F2
BZ050REI060P005F1	BZ050REI120P002F1	BZ050REI120P011F2
BZ050REI060P012F2	BZ050REI120P006F1	BZ050REI120P015F2

EI ₂ klasifikacijos:
EI ₂ 60: C-11-000095-PR04
EI ₂ 90: P.V. RS-12-077
EI ₂ 120: P.V. RS-06-092

NINZ S.p.A.
corso Trento, 2/A
I-38061 ALA (TN) / ITALIJA

152-LT
 5001017/2
 09/12 1/2

1

Išpakuokite duris ir patikrinkite, ar angos sienoje dydis atitinka dydžius, atspausdintus ant spalvoto lipduko, užklijuoto ant rėmo. Nustatykite švirių grindų lygį (FFL)

2

Kairė (SX) Dešinė (DX)

Parinkite durų atidarymo kryptį.

3

Sujunkite kartu rėmo profilius su juodais sujungimais, atpalaiduokite varžtus esančius sujungimuose, kad jie patektų į esamas skylės ant rėmo, kol jungtys įsistatys tvirtai.

4

Atpalaiduokite varžtus dviejų staktų apatinėje dalyje ir pritvirtinkite juos dar kartą įstatant tarpinę, nepašalinant savaiminio plečiančio tarpinės (tikama tik su priešgaisrinėmis durimis).

5

Išlenkite rėmą-kronšteinus ir pažymėkite jų padėtį FFL atžvilgiu ant sienos. Padarykite skylės sienoje kronšteinams. Laikiniai imobilizuokite duris sienos angoje, naudodami gulsčiuoką sienai, baigtoms grindims ir lygiagrečioms sienoms.

6

Unpack door leaf without removing spacers and wedges of PA. Place it in the doorframe inserting pivot with spring in upper hinge on left doors and in lower on right doors.

7

Close the door with the aid of a lever. Bring the main hinge bearings in contact with each other through the use of the screw thread. Operation to be carried out with the maximum care and without forcing. Verify the squareness of the whole door, respecting the FFL and the plumb line. Fix definitively the doorframe with the clamps.

8

Fix the brackets with rapid setting cement. Fill up the space between frame and wall with mortar (detail X) without curving frame.

ADDITIONAL FIXING FOR EI₂ 60, EI₂ 90, EI₂ 120 DOORS

9

In case of EI₂ fire-rated door fasten additionally the doorframe, by drilling with a Ø6mm drill bit, at an intermediate distance between the frame-brackets in the (○) position and fix through all holes using MRS-H Ø7x120mm type wall screws. Remove the lower spacer and use the holes below for a further fixing of the jambs.

10

Remove the spacers between frame and leaf and the lower spacer. Regulate the vertical leaf's position. To raise the door leaf: unscrew the upper blocking screw, screw on the lower one, screw on the upper one again. To lower the door leaf: unscrew the lower blocking screw, screw on the upper one. Operation to be carried out with the maximum care with the aid of a lever.

11

Wind up the spring hinge in the opening direction inserting the tension pin. Even if self closing is not needed or overhead doorclosers are installed, wind up the hinge spring anyway blocking it with the tension pin. The self closing it is mandatory for fire-rated doors.

12

Mount the handle. Remove the sticker from the doorframe by means of hot air, or clean any remains using the product "Ecosolvente A/955" by "Recoll".

13

The closing regulator is obligatory only for fire-rated doors

14

For double leaf doors use the same assemble procedure adding: a) load two pivot with springs; b) install the catch set in the floor; c) regulate the sequencer (arm position perpendicular to the main leaf).

15

Optional: D) rebate sealing - E) overhead doorcloser (the spring must be anyhow slightly loaded) - Exus, Twist or Slash panic bar.

NOTE: multipurpose doors are not equipped with thermoexpanding gaskets and closing regulator.

INSTALLATION, USE AND MAINTENANCE HANDBOOK FOR REI 60, REI 120, EI₂ 60, EI₂ 90, EI₂ 120 AND MULTIPURPOSE PROGET DOORS

I52-GB 2/2

GENERAL NOTES

STANDARD: the assemble instructions have to be followed in every detail to respect the test conditions and assure the perfect functioning of the door, including the self-closing for fire-rated doors. Furthermore a regular service is necessary. Multipurpose doors are not endowed with thermoexpanding gaskets and closing regulators.

LIABILITY: it is duty of the installer to follow the installation instructions in any detail, specifically point 7, 10 and 11 in order to guarantee the safety of the end-users.

MASONRY WORKS: it's the customer's responsibility to keep the wall integral particularly in the anchor points of the door, to fill the space between doorframe and wall with mortar as indicated in box 8 of the present instructions and to execute the masonry works in accordance with the following criteria

- for REI doors according to standard UNI 9723.1990/A1;
 - for EI doors according to standard EN 1363-1 checking that the walls are made of blocks, bricks or homogeneous cement with a density of 1200±400 kg/m³ and a thickness of min. 150 mm.
- All this is particularly valid for fire-rated doors.




FINISHING: the serial door is finished with an epoxy-polyester powder paint oven-baked at 180 °C. The surface is orange-skin and particularly resistant. In case an additional paint is desired we advise to follow these instructions:

- make smooth the surfaces with sandpaper and dust them;
- give a first hand of opaque 2 components epoxide using the product ALCEA EPOX 5203 / 0059 (beige);
- finish the surfaces with enamels or paints to your choice.

CLEANING: the doors are supplied from the factory clean and packed. We suggest to use a clothe and soaped water only. Do not scratch the surfaces.

WARRANTY: the manufacturer gives warranty as per Italian law (C.C.1495). Any claim for missing or damaged goods have to be recorded by inserting a written remark in the delivery notes and must be notified the maximum within eight days from the date of materials receipt.

CURRENT CE MARKED ACCESSORIES FOR FIRE-RATED DOORS:

Std015 lock:		0497-CPD-4265/11	- EN 12209:2003/AC	- 3 M 3 1 0 C 2 H A 2 0
Hinges:		0789-CPD-2005	- EN 1935:2002	- 4 7 7 1 1 4 0 1 4
RC/STD closing regulator:		CPD-0425-1153	- EN 1158:2003	- 3 5 5/3 1 1 4

USE AND MAINTENANCE INSTRUCTIONS FOR PROGET DOORS

All fire-rated doors located in escape routes need regular maintenance in order to verify that no damage occurred and that they close regularly. The scheduled maintenance shall guarantee that the leaf swings correctly and that the self closing mechanism works properly. The doors shall be kept free from any obstructions.

Any 5.000 opening cycles but at least every 6 months the following operations shall be carried out:

- lubricating the ball-bearing hinge;
- lubricating the spring hinge and the spring after removing the tension pin;
- wind up the spring inserting the tension pin. Verify that the closing force is sufficient to shut the door if opened to 30±2°;
- lubricating the lock and the latch.

For double leaf doorsets additional controls shall be carried out:

- verify the functionality of the secondary leaf's rods and lubricate its guide rail;
- clean the hole of the floor catch set;
- lubricate the lock and the self-locking device (top onto passive leaf);
- verify the regular functionality of the closing regulator (arm position perpendicular to the main leaf); lubricate the mobile parts of the closing regulator.


Verify the regular functionality of the doors accessories (handle, panic bar, overhead doorcloser etc.). Their mobile parts shall be lubricated too, following the dedicated instructions.

In case of irregular functioning of the door or its accessories contact an authorized installer or replace the damaged accessories.


Note: for lubrication use viscous products.

STORAGE INSTRUCTIONS:

It is duty of the company/person taking over the goods to store them in a suitable place so that they will be protected from the natural agents and from the direct sun rays. If during transportation or truck unloading it rains or snows on the goods it is necessary to remove immediately the nylon film from each leaf and doorframe, put the goods in vertical position to dry them appropriately. In case of external visible defects on doors, they have to be marked in the copy of the transportation document to be returned to the forwarder and notified to the manufacturer by registered mail within 48 hours. We remember that according to our general conditions intrinsic defects have to be notified to the manufacturer within 8 days from the delivery date by registered mail. Goods with defects never have be utilized or assembled, they should be stored at disposal for controls by the manufacturer appointed person.

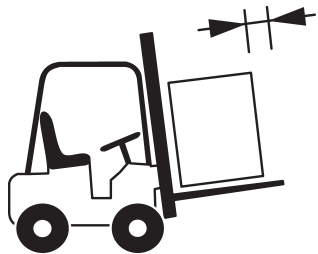

Move the materials with appropriate means.

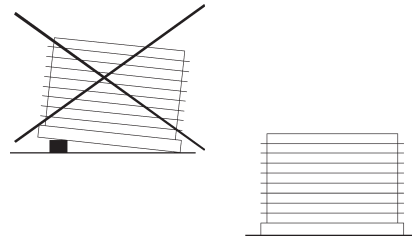

Store and handle the materials with care.



Assemble by qualified staff only.



Do not expose the materials to the natural agents.